


ADFS509

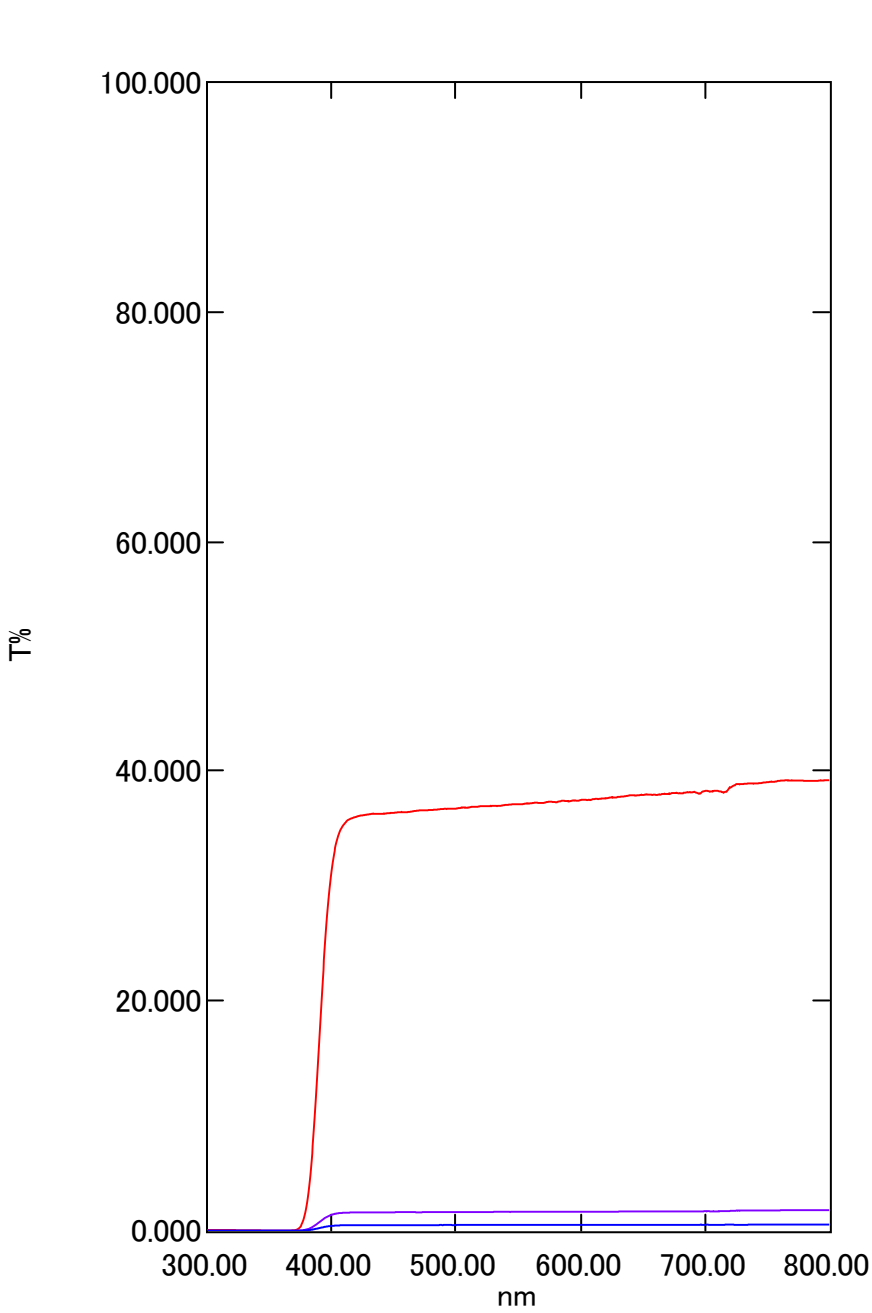

— ADFS509-0 - 0mm
— ADFS509-100 - 100mm
— ADFS509-50 - 50mm

波長 (nm)	0mm ...	50mm ...	100mm ...
300.00	0.067	0.001	0.000
310.00	0.066	0.003	0.001
320.00	0.050	0.002	0.002
330.00	0.029	0.002	0.001
340.00	0.017	0.002	0.001
350.00	0.009	0.000	0.001
360.00	0.006	-0.000	0.001
370.00	0.029	0.002	0.001
380.00	2.148	0.099	0.031
390.00	16.178	0.722	0.216
400.00	31.278	1.378	0.413
410.00	35.380	1.556	0.469
420.00	36.032	1.580	0.477
430.00	36.241	1.593	0.479
440.00	36.284	1.595	0.484
450.00	36.385	1.601	0.484
460.00	36.433	1.607	0.487
470.00	36.580	1.601	0.484
480.00	36.630	1.609	0.486
490.00	36.711	1.613	0.488
500.00	36.735	1.616	0.488
510.00	36.835	1.620	0.490
520.00	36.944	1.626	0.490
530.00	36.989	1.629	0.494
540.00	37.060	1.635	0.495
550.00	37.121	1.636	0.495
560.00	37.203	1.643	0.496
570.00	37.239	1.640	0.500
580.00	37.291	1.645	0.498
590.00	37.378	1.645	0.499
600.00	37.475	1.646	0.499
610.00	37.561	1.647	0.500
620.00	37.642	1.652	0.504
630.00	37.753	1.656	0.505
640.00	37.902	1.667	0.506
650.00	37.944	1.669	0.508
660.00	37.949	1.671	0.509
670.00	38.014	1.662	0.508
680.00	38.101	1.666	0.510
690.00	38.165	1.675	0.513
700.00	38.273	1.688	0.515
710.00	38.305	1.685	0.514
720.00	38.600	1.714	0.523
730.00	38.879	1.744	0.514
740.00	38.932	1.751	0.517
750.00	39.047	1.756	0.522
760.00	39.162	1.769	0.529
770.00	39.200	1.775	0.532
780.00	39.162	1.783	0.531
790.00	39.161	1.779	0.535
800.00	39.218	1.787	0.533

[測定プロパティ]
 波長範囲(nm): 300.00 ~ 800.00
 スキャン速度: 高速
 サンプルングピッチ: 0.5
 オート サンプルングピッチ: 有効
 測定モード: オート

[装置プロパティ]
 装置の種類: UV-3600Plus シリーズ
 測光値: 透過率
 スリット幅: (20)
 時定数: 0.1 秒
 光源: 自動
 光源切替波長: 290.00 nm

.....