


ADFS803

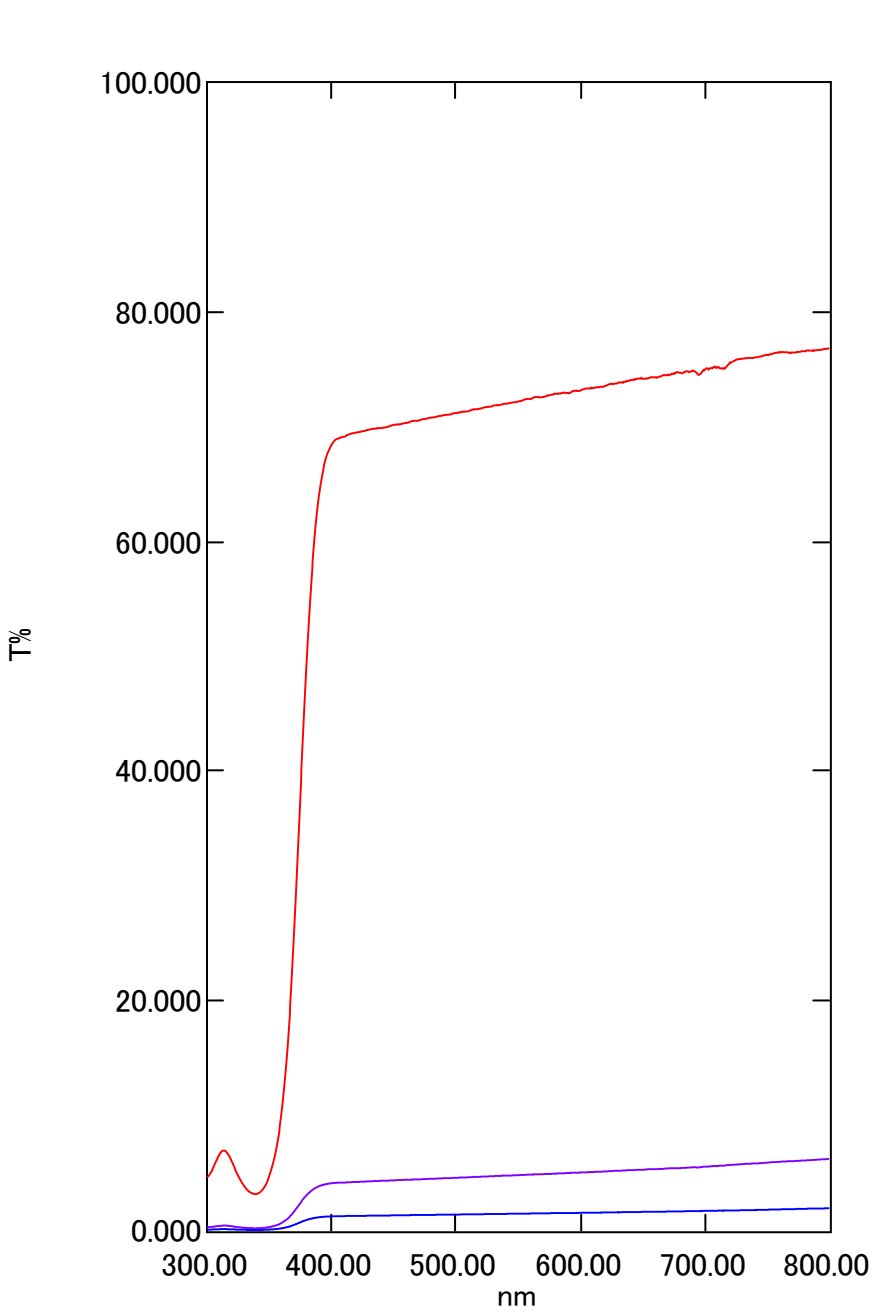

— ADFS803-0 - 0mm  
— ADFS803-100 - 100mm  
— ADFS803-50 - 50mm

波長 (nm)	0mm ...	50mm ...	100mm ...
300.00	4.655	0.283	0.084
310.00	6.645	0.411	0.124
320.00	5.997	0.376	0.114
330.00	3.855	0.247	0.073
340.00	3.194	0.209	0.063
350.00	4.735	0.311	0.091
360.00	10.343	0.673	0.202
370.00	25.975	1.666	0.503
380.00	49.378	3.082	0.928
390.00	64.023	3.870	1.165
400.00	68.424	4.124	1.243
410.00	69.125	4.185	1.267
420.00	69.491	4.239	1.284
430.00	69.732	4.291	1.301
440.00	69.879	4.336	1.315
450.00	70.140	4.381	1.333
460.00	70.317	4.428	1.348
470.00	70.539	4.464	1.358
480.00	70.793	4.512	1.372
490.00	70.982	4.561	1.384
500.00	71.191	4.603	1.400
510.00	71.327	4.645	1.416
520.00	71.578	4.694	1.430
530.00	71.814	4.744	1.449
540.00	71.994	4.792	1.461
550.00	72.186	4.831	1.479
560.00	72.414	4.885	1.491
570.00	72.577	4.918	1.506
580.00	72.859	4.967	1.527
590.00	72.912	5.017	1.536
600.00	73.140	5.060	1.547
610.00	73.360	5.112	1.565
620.00	73.549	5.155	1.585
630.00	73.814	5.212	1.603
640.00	74.040	5.272	1.616
650.00	74.155	5.304	1.636
660.00	74.294	5.361	1.653
670.00	74.514	5.413	1.662
680.00	74.699	5.447	1.674
690.00	74.837	5.511	1.699
700.00	74.945	5.576	1.722
710.00	75.172	5.630	1.738
720.00	75.572	5.722	1.766
730.00	75.908	5.787	1.773
740.00	76.027	5.850	1.796
750.00	76.249	5.921	1.823
760.00	76.461	5.990	1.848
770.00	76.445	6.057	1.875
780.00	76.562	6.111	1.903
790.00	76.646	6.174	1.921
800.00	76.835	6.235	1.953

[測定プロパティ]

波長範囲(nm): 300.00 ~ 800.00  
 スキャン速度: 高速  
 サンプルングピッチ: 0.5  
 オート サンプルングピッチ: 有効  
 測定モード: オート

[装置プロパティ]

装置の種類: UV-3600Plus シリーズ  
 測光値: 透過率  
 スリット幅: (20)  
 時定数: 0.1 秒  
 光源: 自動  
 光源切替波長: 290.00 nm

.....